

Fuser Replacement Instructions



Important Safety Notice


Follow these steps before attempting to install your replacement fuser unit:

1. Switch your Brother HL-6050 printer off at the switch and **unplug** from the mains supply.
2. If the printer is still hot from use, leave it for at least **30** minutes until it has cooled down.
3. Follow the instructions below.

Fuser Replacement Process




1. Undo the two screws marked
2. Remove the plastic frame.

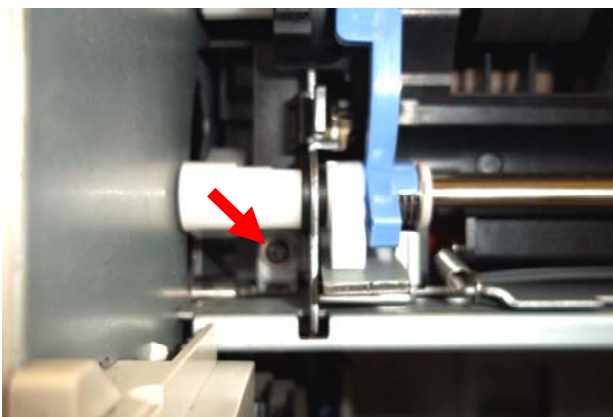

3. Get your eyes level with the fuser, and on the lower left corner, remove the screw as marked.

4. A magnetic Philips screwdriver will help with this.

5. Remove the screw on the lower right corner of the fuser.

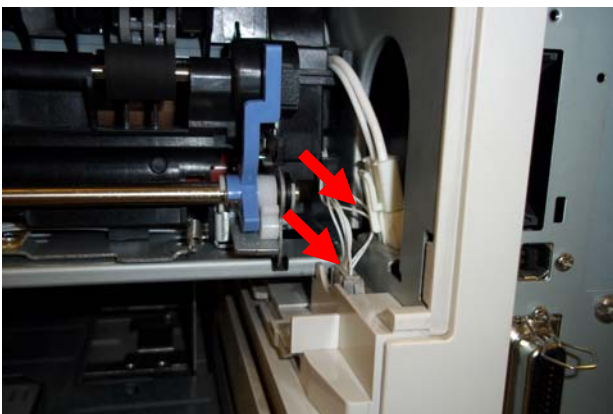

6. Carefully disconnect the two cables on the right hand side of the fuser.

7. Remove your old fuser, and replace with new one as supplied.

8. Fitting is the just reverse of the removal process.

If at any point you are unsure about anything regarding the installation please ring the Bestplate Technical Dept on 01253 475217.