


### How to load a new ribbon

1. Open the lid of your printer
2. Lift the carriage using green/blue button/lever
3. Detach the mandrels from printer and remove the old ribbon, keeping the empty cardboard core if your new ribbon doesn't come with one (depends on model)
4. Push the mandrels through the cores of your new ribbon all the way to the end stops, and attach to carriage with the ribbon passing underneath the bottom of the carriage.
5. With the carriage still lifted up, manually turn the pickup mandrel so that there are at least two turns of black ribbon on the pickup mandrel (direction depends on model) - then lock the carriage down.

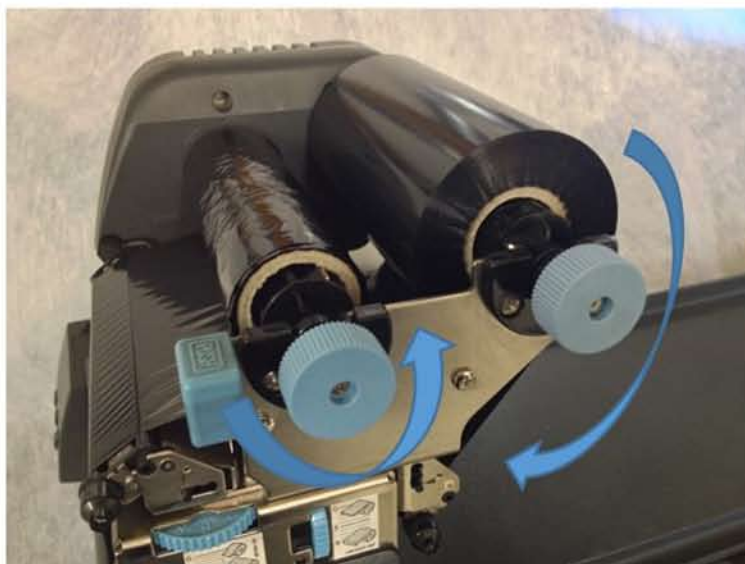

Ribbon loaded on a CLP-621



Ribbon loaded on a CLP-2001